PURE

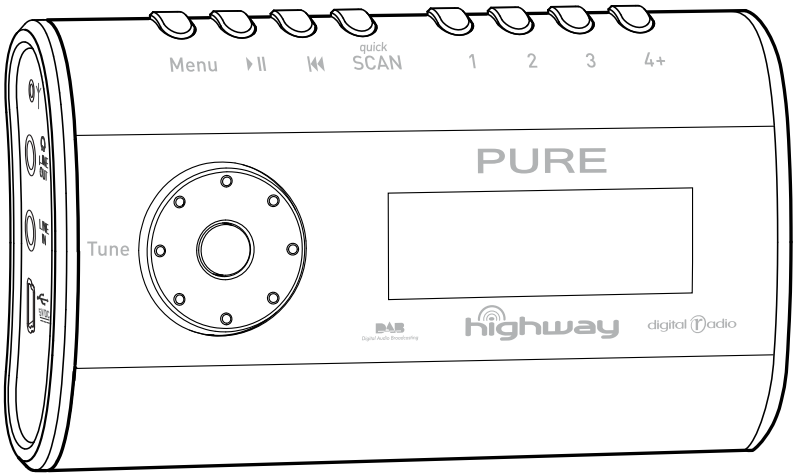

Owner's Manual EN

Bedienungsanleitung DE

Manuel de l'utilisateur FR

Manuale dell'utente IT

Brugsvejledning DK

Gebruikershandleiding NL

highway

In-Car DAB Digital Radio with FM Transmitter

⚠ WARNING (EN)

Fit the unit and the aerial in a position that does not obscure the driver's view.

Fit the unit securely.

Do not fit the unit or the aerial in such a way that may interfere with the safe operation of the vehicle, the deployment of air bags or other safety equipment.

Do not operate the unit while driving.

Read this manual fully before operating the unit, including all safety notices.

⚠ CAUTION (EN)

Do not expose the unit to direct sunlight for long periods, for example, inside a hot car.

To reduce the risk of theft, remove the unit and the mount from your vehicle, or position them out of sight, before leaving your vehicle unattended.

Remove the batteries from the product if it isn't going to be used for a long period.

WARNING is used throughout this manual to indicate a potentially serious risk to your personal safety. Obey all safety notices that accompany this symbol to avoid possible injury or death.

CAUTION is used throughout this manual to indicate a risk to your personal safety or possible vehicle damage. Obey all safety notices that accompany this symbol to avoid minor or moderate injury or damage to your vehicle.

⚠ WARNUNG (DE)

Bringen Sie das Gerät und die Antenne so an, dass das Blickfeld des Fahrers nicht beeinträchtigt wird.

Befestigen Sie das Gerät sicher.

Bringen Sie das Gerät oder die Antenne so an, dass die Sicherheit des Fahrzeugs und das Funktionieren von Airbags oder anderen Sicherheitsvorkehrungen nicht beeinträchtigt werden.

Bedienen Sie das Gerät nicht beim Fahren.

Lesen Sie das gesamte Handbuch mit allen Warn- und Sicherheitshinweisen durch, bevor Sie das Gerät in Betrieb nehmen.

⚠ ACHTUNG (DE)

Setzen Sie das Gerät nicht über längere Zeit direkter Sonneneinstrahlung aus, etwa in einem heißen Fahrzeug.

Um das Risiko eines Diebstahls zu minimieren, sollten Sie das Gerät mit seiner Halterung aus dem Fahrzeug nehmen oder an einer nicht einsehbaren Stelle verstauen, wenn Sie Ihr Fahrzeug unbeaufsichtigt abstellen.

Nehmen Sie die Batterien aus dem Gerät, wenn es über einen längeren Zeitraum nicht genutzt werden soll.

WARNUNG wird in diesem Handbuch verwendet um anzuzeigen, dass eine ernsthafte Gefährdung Ihrer Sicherheit besteht. Beachten Sie alle Warnhinweise mit diesem Symbol, um mögliche Gefährdungen für Leben und Gesundheit auszuschließen.

ACHTUNG wird in diesem Handbuch verwendet um anzuzeigen, dass eine mögliche Gefährdung Ihrer Sicherheit oder Ihres Fahrzeuges besteht. Beachten Sie alle Sicherheitshinweise mit diesem Symbol, um kleinere oder mittelschwere Verletzungen oder eine Beschädigung Ihres Fahrzeugs auszuschließen.

⚠ AVERTISSEMENT (FR)

Placez la radio et l'antenne à un endroit qui ne gêne pas la visibilité du conducteur.

Fixez correctement la radio.

N'installez pas la radio ou l'antenne d'une façon pouvant gêner la sécurité d'utilisation du véhicule, le déploiement des coussins gonflables et des autres équipements de sécurité.

Ne manipulez pas la radio en conduisant.

Veuillez lire intégralement cette notice avant d'utiliser la radio, ainsi que toutes les consignes de sécurité.

⚠ ATTENTION (FR)

N'exposez pas la radio aux rayons directs du soleil pendant des périodes prolongées, par exemple, à l'intérieur d'une voiture en plein soleil.

Pour réduire le risque de vol, retirez la radio et son support du véhicule ou cachez-les avant de laisser votre véhicule sans surveillance.

Retirez les piles de la radio si vous ne l'utilisez pas pendant une période prolongée.

La mention « **AVERTISSEMENT** », que vous retrouvez tout au long de cette notice, vous prévient d'un danger éventuel pour votre sécurité. Appliquez les consignes de sécurité qui suivent ce symbole pour éviter tout risque de blessure grave, voire mortelle.

La mention « **ATTENTION** », présente tout au long de cette notice, vous prévient quant à elle d'un danger éventuel pour votre sécurité ou d'un risque probable pour votre véhicule. Appliquez toutes les consignes de sécurité qui suivent ce symbole pour éviter tout risque de blessure plus ou moins grave ou de dommage au niveau de votre véhicule.

⚠ AVVERTENZA (IT)

Montare l'unità e l'antenna in modo da non ostruire la vista del guidatore.

Montare l'unità in modo sicuro.

Montare l'unità o l'antenna in modo che non interferisca con il funzionamento sicuro del veicolo, con l'apertura degli airbag o altre apparecchiature di sicurezza.

Non utilizzare l'unità durante la guida.

Prima di utilizzare l'unità, leggere per intero il presente manuale, comprese le avvertenze di sicurezza.

⚠ ATTENZIONE (IT)

Non esporre l'unità alla luce diretta del sole per periodi prolungati, ad esempio all'interno di un'auto a temperatura elevata.

Per ridurre il rischio di furti, prima di lasciare il veicolo incustodito rimuovere l'unità e il supporto oppure posizionarli in modo che non siano visibili.

Se il prodotto non sarà utilizzato per un periodo prolungato, rimuovere le batterie.

Nel presente manuale, il simbolo **AVVERTENZA** è utilizzato per indicare un rischio potenzialmente grave per la sicurezza personale. Al fine di evitare possibili lesioni o la morte, attenersi alle avvertenze di sicurezza che accompagnano tale simbolo.

Nel presente manuale, il simbolo **ATTENZIONE** è utilizzato per indicare un rischio per la sicurezza personale o un potenziale danno al veicolo. Al fine di evitare lesioni di lieve o moderata entità o danni al veicolo, attenersi alle avvertenze di sicurezza che accompagnano tale simbolo.

⚠ ADVARSEL (DK)

Monter enheden og antennen i en position, der ikke generer førerens udsyn.

Monter enheden sikkert.

Monteringen af enheden og antennen må ikke hindre sikker betjening af bilen eller ske i udløsningsområdet for airbags eller andet sikkerhedsudstyr.

Betjen ikke enheden under kørslen.

Læs vejledningen helt igennem, før du tager enheden i brug, herunder alle sikkerhedsmeddelelser.

⚠ FORSIGTIG (DK)

Beskyt enheden mod direkte sollys i længere tid ad gangen, for eksempel når du opbevarer den i en varm bil.

For at reducere risikoen for tyveri skal du fjerne enheden og beslaget fra bilen eller anbringe dem, så de ikke er synlige, før du forlader køretøjet.

Tag batterierne ud af produktet, hvis det ikke skal bruges i længere tid.

ADVARSEL bruges i hele vejledningen til at angive en potentielt alvorlig risiko for din personlige sikkerhed. Følg alle sikkerhedsmeddelelser, der følger efter dette symbol, for at undgå potentielle ulykker eller dødsfald.

FORSIGTIG bruges i hele vejledningen til at angive en risiko for din personlige sikkerhed eller for potentielle skader på køretøjet. Følg alle sikkerhedsmeddelelser, der følger efter dette symbol, for at undgå mindre eller moderate personskader eller skader på køretøjet.

⚠ WAARSCHUWING (NL)

Plaats de unit en de antenne zo dat hierdoor het zicht van de bestuurder niet wordt belemmerd.

Plaats de unit in een veilige positie.

Plaats de unit en de antenne zo dat deze de veilige bediening van het voertuig en de werking van de airbags of andere beveiligende apparatuur niet hinderen.

Bedien de unit niet tijdens het rijden.

Lees deze handleiding en alle veiligheidsberichten in zijn geheel door voordat u de unit in gebruik neemt.

⚠ VOORZICHTIG (NL)

Stel de unit niet lange tijd bloot aan direct zonlicht, zoals bijvoorbeeld in een hete auto.

Om het risico op diefstal te reduceren, kunt u de unit en de montage uit uw voertuig verwijderen of uit het zicht verplaatsen voordat u uw voertuig onbeheerd achterlaat.

Haal de batterijen uit het product als u deze voor langere tijd niet gebruikt.

In deze handleiding wordt **WAARSCHUWING** gebruikt om een potentieel ernstig risico voor uw persoonlijke veiligheid aan te geven. U dient alle veiligheidsberichten bij dit symbool op te volgen om mogelijk letsel of de dood te voorkomen.

In deze handleiding wordt **VOORZICHTIG** gebruikt om een risico voor uw persoonlijke veiligheid of mogelijke schade aan een voertuig aan te geven. U dient alle veiligheidsberichten bij dit symbool op te volgen om letsel, in mindere of meerdere mate, of schade aan uw voertuig te voorkomen.

About Highway

Highway brings DAB digital radio into your vehicle

Highway is an in-car DAB adapter that brings the increased station choice, quality and convenience of DAB digital radio into your vehicle. It works by transmitting DAB audio to a free FM frequency on your existing car radio, or by connecting to your car radio's line in connection (if available). Highway enables you to choose from a wide variety of national and local DAB stations and enjoy them wherever your journey takes you.

Easy to fit

DAB signals are received through the included aerial, which attaches discreetly to your windscreen. The unit itself attaches to a flexible windscreen mount and is powered by connection to your vehicle's 12-24V (cigarette lighter) power socket. Read the Fitting instructions on page 4 or refer to the separate Quick Install Guide to learn how to fit Highway into your vehicle.

Advanced features

To help you find a free FM frequency Highway features quickSCAN to automatically scan to the next free FM frequency at the touch of a button, and there's also four FM transmit presets for easy access. Highway can pause DAB radio for a short period, or even skip back through live DAB radio in ten second intervals to catch any traffic reports or news bulletins you may have missed.

Versatile

Connect an iPod or other MP3 player to the 'LINE IN' socket and Highway will transmit your music to your car stereo. And when you've finished your journey you can take Highway off the mount, connect some headphones* and use it as a handheld portable DAB radio powered by two AA batteries*.

**Not included*

Note

To comply with legal requirements the FM transmitter function of Highway will switch off if no audio is transmitted for a period lasting over a minute – this includes DAB radio or audio from an auxiliary device such as an MP3 player. If FM transmission is switched off you need to re-tune to an active DAB station or re-start the connected auxiliary device (for example, an MP3 player).

Table of contents

Fitting instructions 4

Tuning in 5

Overview of controls, connectors and display 6

- Controls at a glance 6
- Guide to connectors 7
- Guide to screen 7

Using Highway 8

- Changing stations 8
- Switching the unit on and off 8
- Changing the FM transmission frequency 8

DAB Presets 9

- Storing station presets 9
- Selecting station presets 9

FM transmission Presets and Autotune 10

- FM transmission presets 10
- To store a preset FM transmission frequency 10
- To select a preset FM frequency 10
- Finding new stations with Autotune 10

ReVu™ 11

- To skip back through live radio 11
- To pause live radio 11

Auxiliary mode and Handheld mode 12

- To connect an MP3 player 12
- Using Highway as a handheld DAB radio 13
- To adjust the volume in Handheld mode 13
- To reconnect for in-car use 13

Change options and settings 14

- Trim station list 14
- Info display 14
- Station order 15
- Auto power down 15
- Fade on burble 15
- Backlight 15
- Upgrade 15

Questions about Highway 16

- Questions about DAB reception 16
- Troubleshooting 17

Technical Specifications 18

- Resetting Highway 18

EN

Fitting instructions

Note: the adhesive windscreen aerial is only suitable for one use and will not re-adhere to the windscreen. You may wish to affix the aerial using a temporary adhesive first to test the quality of reception before attaching the aerial permanently.

1. Peel off the adhesive backing and attach the aerial to your windscreen. To optimise reception, position the signal amplifier (the black plastic case) and the dual aerial wires 3 to 5cm away from the side of the windscreen and 1 to 2cm from the top. » **A**.
2. If possible, tuck the aerial cable into the recess between your windscreen and the passenger pillar or affix it to your windscreen using the adhesive clips provided. Run the aerial cable out of sight along the front of your dashboard. » **A**
3. Next attach the windscreen mount. Clean the area you are attaching the suction cup to with a dry cloth then peel off the transparent film from the suction cup. Press the suction cup firmly against the windscreen to form an airtight seal and push down the catch to securely fasten the mount to the windscreen. » **B**
4. Coil any excess cable around the cable tidy on the back of the mount and then insert the aerial jack into the aerial input on the Highway unit (marked ⅄). » **C**
5. Press the Highway unit against the mount until the magnetic coupler holds it firmly in place. » **C**
6. **(Optional)**. If you want to connect Highway to your car radio's line in input (if available) connect a 3.5mm audio cable (not supplied) from the 'LINE OUT' socket on the Highway unit to your car radio's line in input.
7. Insert the power cable into the mini-USB socket on the side of the Highway unit and then insert the adapter into your vehicle's 12–24V (cigarette lighter) external power socket. » **D**

A

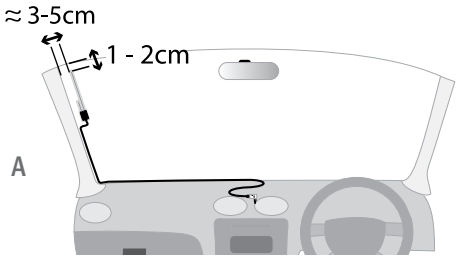

B

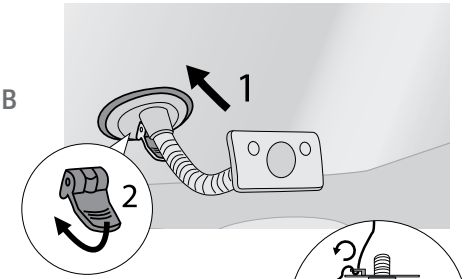

C

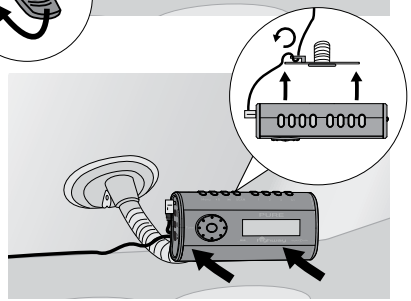

D

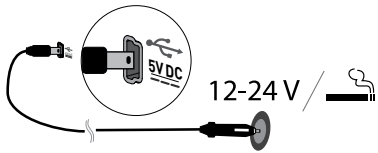

Tuning in

1. Highway may automatically switch on when you connect the power cable to your vehicle's external power socket. If nothing happens make sure that there is power available from the external power socket and press the [Tune] button to switch the unit on.

2. Wait for Highway to perform an autotune for all available DAB stations, which takes about a minute. The number of stations found is displayed.

3. Wait for Highway to search for a free FM frequency for transmitting DAB audio. *(If you have connected Highway to your car stereo's line in input the FM scan does not occur. Go to step 5.)*

4. The screen shows the optimal free FM transmission frequency. Tune your car radio to the FM frequency shown to hear the DAB station, e.g., 88.1MHz. If your car radio has RDS enabled you will see 'PURE DAB' on the car radio's display.

5. After 30 seconds the DAB station screen appears, or you can rotate the [Tune] dial or press any button to see it sooner.

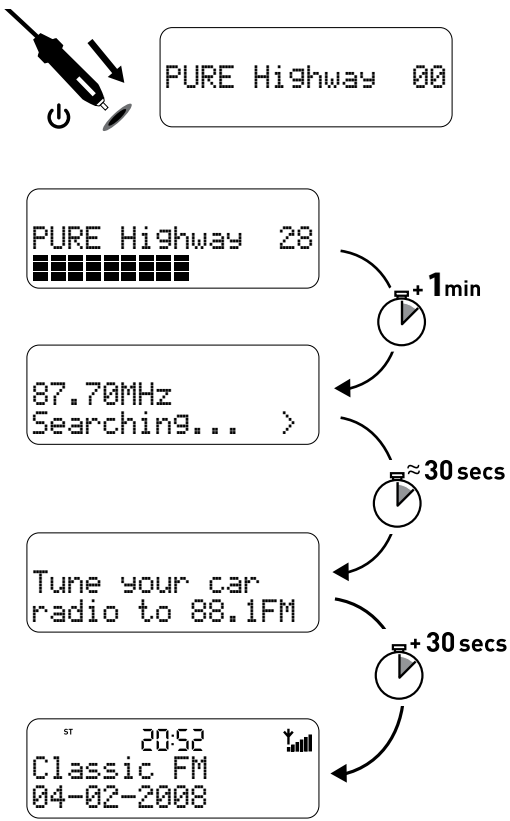

EN

Overview of controls, connectors and display

In-Car controls at a glance

1. [Tune] Press the centre button to switch the unit on. Press for two seconds and release to switch the unit off. Rotate the dial to scroll through the station list and push the centre button to tune to a station. Navigate menu options.
2. [Menu] Enter the setup menu to change options and settings. Go back one step/level when in a menu.
3. [▶ II] Press once to pause the current radio station and press again to resume playing. Press and hold to return to real time audio, or press [Tune].
4. [⏮] Press and repeat to skip backwards through live radio in ten second intervals or press and hold to fast skip. To return to real time audio press and hold [▶ II], or press [Tune].
5. [quick SCAN] Press once to display the current FM transmission frequency and then press again to scan to the next available free FM transmission frequency.

   Press once and then press and hold to scan the full FM frequency range.

   Press once and then press and hold [1, 2, 3 or 4+] to store the current FM transmission frequency to the corresponding preset button.

   Press once and then press [1, 2, 3 or 4+] to access the corresponding FM transmission preset.
6. [1, 2, 3] Press and hold to store the current DAB station to the corresponding preset button. Press to tune to a preset DAB station.

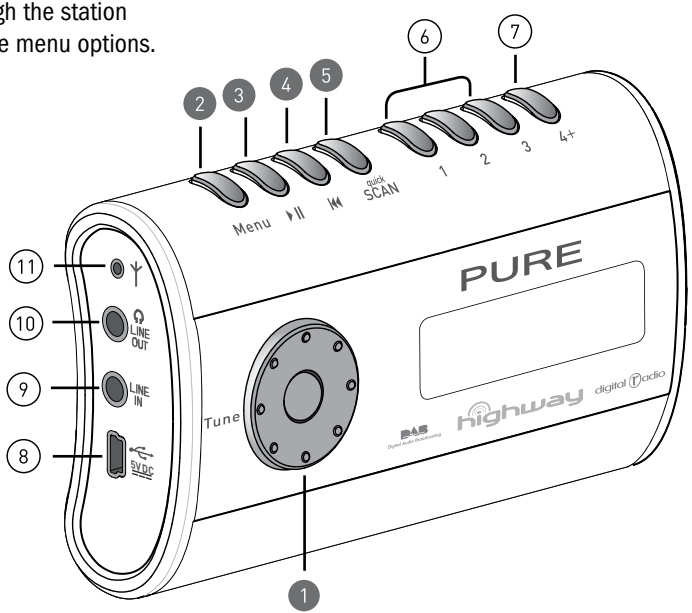

7. [4+] Press to enter the preset list (1-20) and rotate the [Tune] dial to browse presets.

   Press [Tune] to select the preset or press and hold [4+] to store the current station as a preset. Press [4+] to exit the list.

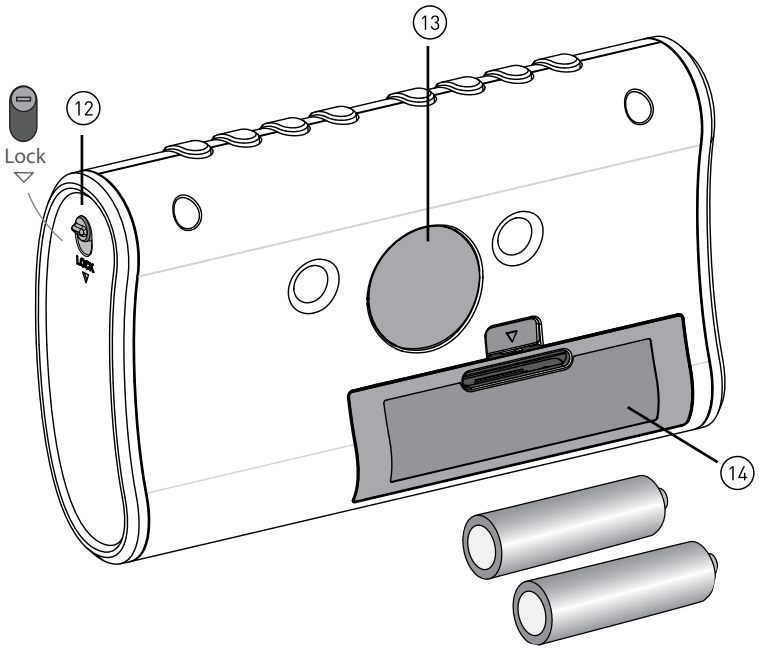

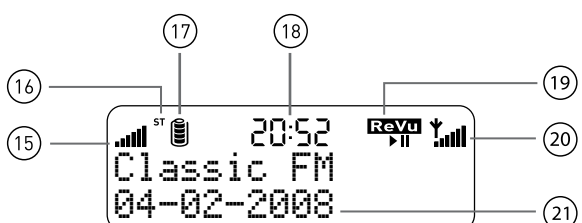

Guide to connectors

8. [5V DC] Insert the supplied 5V DC in-car power adapter or a 'mini-B' USB lead for software upgrades.
9. [LINE IN] Connect an iPod or other MP3 or CD player to activate Auxiliary Mode.
10. [LINE OUT] Connect Highway to your car stereo's line-in connector (if available).

    Remove unit from car, disconnect power cable and connect headphones to activate Handheld mode and use Highway as a personal DAB radio.
11. [Y] Connect the supplied windscreen aerial.
12. [Lock] Push down to lock the controls.
13. [Magnet] Attach to the magnetic windscreen mount.
14. [Battery cover] Insert 2 x AA batteries (not included) to power the unit in Handheld mode only. Note that the batteries are not used for in-car operation.

EN

Guide to screen

15. Headphone volume level (Handheld mode only).
16. 'ST' indicates that the DAB station is broadcasting in stereo.
17. Battery level (Handheld mode only).
18. Time (automatically updated by the DAB signal).
19. ReVu™ icons indicate that audio is currently time-shifted.
20. DAB reception level.
21. Information display area (date by default).

Changing stations

1. Rotate the [Tune] dial to scroll through the station list. » A
2. Push the [Tune] button to select a station. » B

Switching the unit on and off

To switch the unit off press and hold the [Tune] button until 'Switching off' is displayed. A single press of the [Tune] button switches the unit on again.

Changing the FM transmission frequency quick SCAN

If you hear interference when listening to Highway you can change the FM frequency that Highway is transmitting on and then re-tune your car radio to the new frequency.

To quick scan to the next free FM transmission frequency

1. Press the [quickSCAN] button twice to scan to the next free FM frequency. » C
2. Re-tune your car radio to the new FM frequency displayed. » D
3. Press [Tune] to exit the FM frequency screen, or wait a few seconds.

To scan to the next or previous free FM transmission frequency

1. Press [quickSCAN] to display the current FM transmission frequency. » E
2. Rotate the [Tune] dial to scan to the next or previous free FM frequency. » F
3. Re-tune your car radio to the new FM frequency, or rotate the [Tune] dial again.

To manually set the FM transmission frequency

Change the FM tuning mode to 'Manual' (page 14) and follow the steps above to adjust the transmission frequency in 01.MHz increments

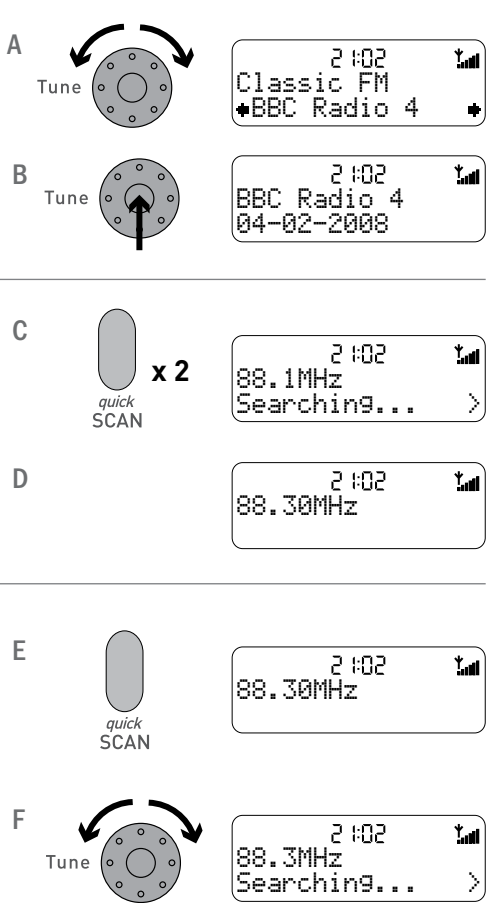

Storing station presets

You can store up to twenty stations as presets for quick access to your favourite stations.

To store a station to preset buttons 1, 2 and 3

1. Tune to the station you want to store as a preset.
2. Press and hold preset button [1], [2] or [3] to store the current DAB station to that preset button. » A

To store a station to the preset list

1. Tune to the station you want to store as a preset.
2. Press the [4+] button to enter the preset list. » B
3. Rotate the [Tune] dial to scroll to any preset number between 1 and 20. » C
4. Press and hold the [4+] button until you see the 'Preset saved' message. » D

Selecting station presets

To select presets 1 to 3

Press the corresponding preset button [1], [2], or [3].

To select presets from the preset list

1. Press the [4+] button to enter the preset list. » B
2. Rotate the [Tune] dial to scroll to the preset you want to listen to and press the [Tune] button to select the preset. » E

If you do not select a preset, press [Menu] to return to the DAB screen.

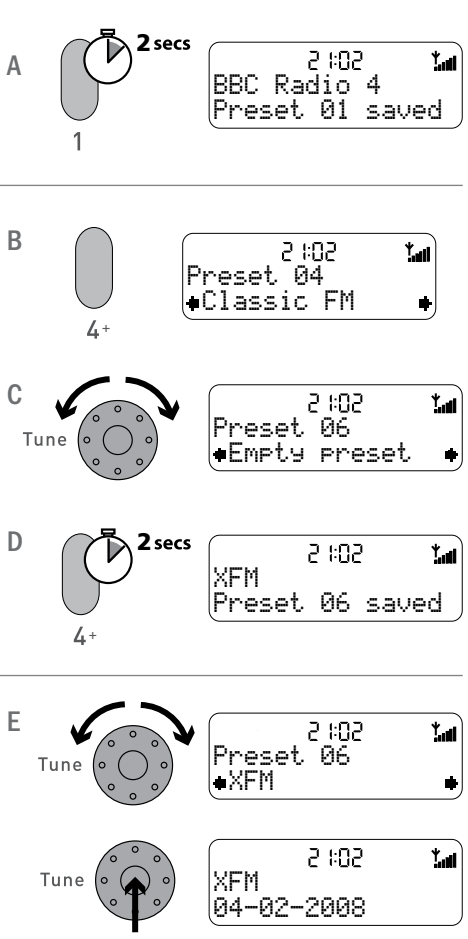

EN

FM transmission presets

You can store up to four FM transmission frequencies to the preset buttons [1], [2], [3] and [4+]. If you experience interference in the FM signal when listening to Highway on a regular journey (e.g., a commute) you may find it useful to store the free FM frequencies that work best as presets and then store the same frequencies to the corresponding preset buttons on your car radio.

To store a preset FM transmission frequency

1. Press [quickSCAN] to display the current FM transmission frequency. » A If you want to change this frequency see page 8.
2. Press and hold one of the preset buttons [1], [2], [3] or [4+] until you see the 'FM saved' message. » B Press [Tune] to return to the DAB screen.

To select a preset FM frequency

1. Press [quickSCAN] followed by either [1], [2], [3] or [4+]. » C
2. Press [Tune] to return to the DAB screen, or wait 30 seconds.

Finding new stations with Autotune

The number of DAB stations you can receive may change during long journeys, particularly if you enter or exit a local multiplex (a group of DAB stations broadcast by the same operator). Perform an Autotune to search for all stations available and add any new stations to the list.

To start an autotune

1. Press the [Menu] button followed by [Tune] to select 'Autotune'. » D
2. Wait for the Autotune to complete or press the [Tune] button to stop it. » E

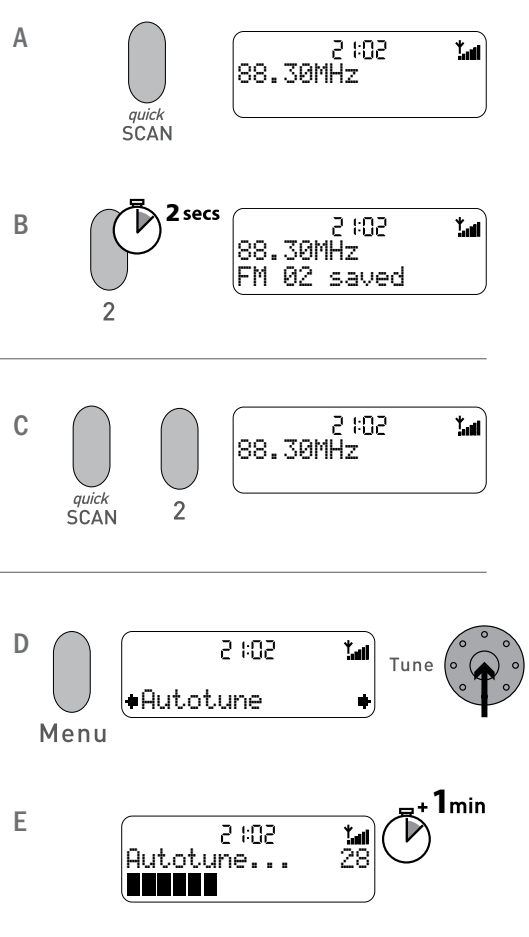

Using ReVu

You can skip back through stored audio of the current station, which may be useful to check a traffic report or important announcement. You can also pause live radio and then resume playing where you left off.

To skip back through live radio

1. Press the skip button [⏮] button once or repeatedly, or press and hold, to skip back through the current broadcast in intervals of approximately ten seconds. You can skip back for a few minutes (the exact time depends on the station) to the beginning of the stored audio or up to the moment you started listening to the current DAB station. When you are skipped back through the current broadcast the ReVu icon and the duration you are behind the live broadcast appear on screen. » A
2. To return to live radio, press and hold the [▶❚❚] button or press [Tune].

To pause live radio

1. Press the play/pause [▶❚❚] button to pause the current broadcast for a few minutes. When live radio is paused, the pause icon appears on screen and the time paused is counted up. You can pause a live broadcast or a broadcast you have already skipped back (see above). » B
2. Press the play/pause button [▶❚❚] again to resume playing. » C
3. To return to live radio, press and hold [▶❚❚] or press [Tune].

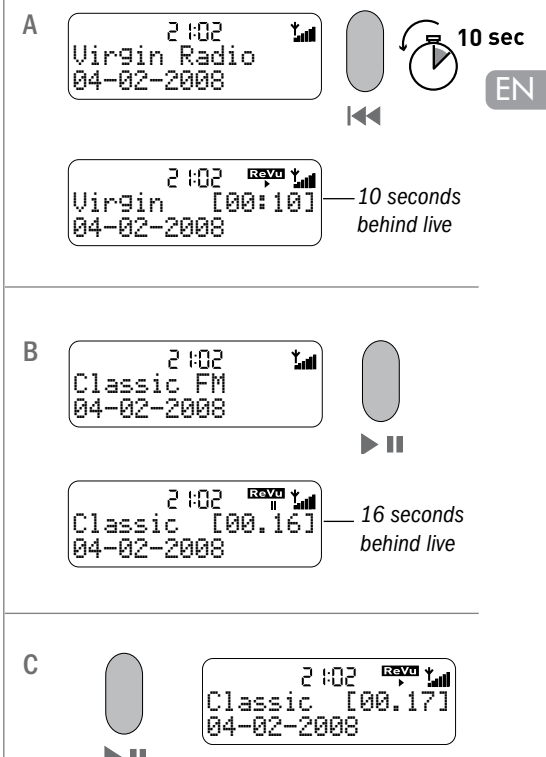

To connect an MP3 player

1. Connect an auxiliary device (an iPod, MP3 or CD player) into the 'LINE IN' socket on the side of the unit using a suitable audio cable with a 3.5mm jack (not supplied). When a device is connected to the 'LINE IN' socket the screen on the unit will display 'Auxiliary input'. » A
2. If necessary, press the [Tune] button to switch Highway on.
3. Set the volume level of the auxiliary device to medium, press play and adjust the volume level on the car stereo if necessary. Highway will transmit the audio to the currently selected FM frequency.
4. If you hear interference when listening to an auxiliary device press [quickSCAN] twice to scan up to the next free FM frequency and then re-tune your car radio to the new frequency. You can also store FM transmit presets (see page 10).

To listen to a radio station again

Disconnect your iPod, MP3 or CD player from the 'LINE IN' socket on Highway to return to listening to DAB. It is not possible to switch back to DAB without disconnecting the lead from the 'LINE IN' socket.

A

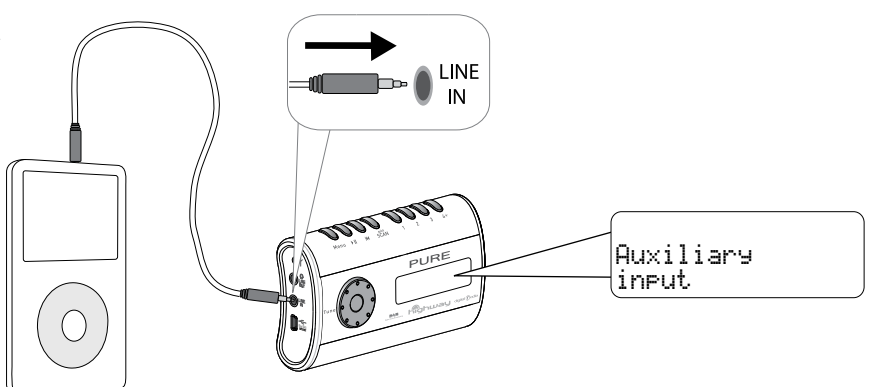

Using Highway as a handheld DAB radio

You can use Highway as a personal handheld DAB radio (the headphones work as the aerial). Firstly remove the unit from your vehicle and insert two 'AA' batteries into the rear compartment. Note that in handheld mode the unit does not transmit on FM.

To activate Handheld mode

1. Press and hold the [Tune] button to switch the unit off. Remove all connectors from the unit, including the power cable.
2. Detach the unit from the windscreen mount.
3. Insert headphones into the 'LINE OUT' connector on the side of the unit and press the [Tune] button to switch Highway on. The battery level and volume level indicators now appear on screen.

To adjust the volume in Handheld mode

1. Push the [Tune] button and then rotate the [Tune] dial left or right to adjust the volume. » A
2. To exit the volume screen, press [Tune] again. » B

To reconnect for in-car use

1. **Disconnect the headphones.**
2. Attach the unit to the mount, insert the aerial and insert the power cable.
3. Switch the unit on.

A

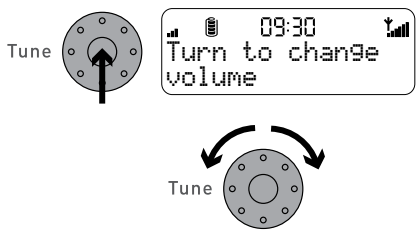

B

EN

CAUTION

Always disconnect the headphones from the unit **BEFORE** reconnecting the unit to your car's power supply. When re-connected for in-car use the volume level will steadily increase to the maximum level to improve in-car transmission.

Change options and settings

Press the [Menu] button to access the following setup options and use the [Tune] dial to select options and adjust values.

Autotune

Select 'Autotune' to search for all DAB stations you can receive, add any new stations to the list and group inactive stations (preceded by '?') at the bottom of the station list.

FM tuning

Choose between two actions when the [Tune] dial is rotated in the quickSCAN screen (page 9):

Auto	Rotate [Tune] to scan up or down through the FM frequency range (default).
Manual	Rotate [Tune] to fine-tune the FM transmission frequency in increments of 0.1MHz.

Stereo/Mono

You can change the 'Stereo/Mono' setting if you experience FM interference when listening to a DAB station. Choose between:

Auto (default)	Stereo DAB stations are transmitted to your car radio in stereo; mono DAB stations are transmitted in mono.
Forced Mono	All DAB stations are transmitted to your car radio in mono, which may reduce FM interference when listening to stereo DAB stations. Line-in audio (iPod) is also transmitted in mono.

Trim station list

Select this option to remove inactive stations and unavailable stations – preceded by '?' – from the station list.

Info display

You can change the information shown on the bottom half of the screen. Choose between:

Date	Displays the date automatically updated by the DAB signal (default).
Programme type	Describes the content of the current DAB station, e.g., Pop Music.
Signal strength	Displays a meter illustrating the strength of the DAB signal. The outlined bar is the minimum signal required.
Signal quality	Displays DAB signal quality: 85 to 100 is good, 70 to 84 is OK, 0 to 69 is poor.
Multiplex name	Displays the name of the DAB multiplex in which the current station is broadcast, e.g., BBC National DAB.
Multiplex info	Displays the channel and frequency of the current DAB multiplex, e.g., 11D, 222.06MHz.
Scrolling text*	Information broadcast by most DAB stations (may include song titles, news, contact information, etc.)

*Scrolling text info display mode is only available in certain countries.

WARNING

To avoid distraction do not use the Scrolling text information display when driving.

Station order

You can change the way the station list is arranged. Choose between:

Active station	Lists active stations first on the station list (default). Currently unavailable stations are marked with '?' and grouped together at the bottom of the station list.
Multiplex	Lists stations in groups according to their multiplex (a group of stations broadcast by the same operator).
Alphanumeric	Lists all stations in alphanumeric order (0-9, A-Z).

Auto power down

Choose a period of time after which Highway will switch off if no buttons are pressed: Disabled, 1 hour, 2 hours, 4 hours (default) or 8 hours.

Fade on burble

Choose to fade down the audio if the DAB station starts 'burbling', which occurs when the DAB signal becomes too weak to receive correctly. 'Burbling' is distinct from the hissing or crackling which you will hear if a free FM frequency is interrupted. Choose between:

Enable	Audio will fade out when DAB reception reaches the point where it is too weak to de-code correctly (default).
Disable	Audio will not fade out in the event of signal loss.

Backlight

Switch the backlight behaviour between 'On' (default), 'Timed off' and 'Off'. If you select 'Timed off' the backlight will switch on for a short period after a button has been pressed.

Upgrade

Software upgrades may be issued for Highway in the future to provide enhanced in-car functions or improve performance. If you register your product and include an e-mail address you will receive e-mail notification of any new upgrades for your product that are added to the support website at www.pure.com/support. If an upgrade has been issued you can upgrade Highway using a PC connected to the [5V DC] / USB port. To upgrade, select 'Upgrade' and follow the instructions provided with the upgrade software.

Questions about DAB reception

What is a multiplex?

A multiplex is a group or block of DAB stations broadcast by the same operator. In the UK there are two national multiplexes, which broadcast the same group of stations across the country, and numerous local multiplexes specific to geographical regions, for example, Switch London. You can view which multiplex the radio station is in by changing the 'Info display' mode to 'Multiplex name' (page 14). The range of local multiplexes you can receive may change as you drive into or out of a particular region. Performing an autotune (page 10) will always update the station list with new stations found.

What should I do if I lose reception...

The message 'Station not available' or a 'burbling' noise means that the DAB signal for the current station is weak.

...For a national station?

Many DAB stations are broadcast on a national multiplex and are available, depending on DAB coverage, across the whole of the UK. If you begin to lose reception you may be passing into a weaker signal coverage area for the national multiplex.

...For a local station?

If you are tuned to a local DAB station, you may have left the signal coverage area for the local DAB multiplex on which the station is broadcast and you therefore need to select another station in a different multiplex.

What happens if I drive into a tunnel?

The DAB signal will weaken in a tunnel, causing the audio to fade down and 'Station not available' to appear. On exiting the tunnel, Highway will reacquire the station, gradually fading the audio back up again. You can switch off the 'Fade on burble' setting (page 15).

Tip Interference in the FM frequency sounds like hissing, crackling or intruding music – different from the 'burbling' sound of a weak DAB signal.

Why do some stations have '>>' after their name?

Secondary services accompany some stations, providing extra information or alternative content and may only be broadcast at certain times. If a station has secondary services available, the station shows '>>' next to its name in the station list and the secondary service appears next to the station in the list. A secondary service has a '<<' before its name in the station list.

Why do some stations have '?' before their name?

These stations are inactive or unavailable and are grouped at the bottom of the station list when the default 'Active station' station order is selected. A station may be inactive or unavailable because you have lost the DAB signal, the signal is not strong enough to receive the multiplex on which the station is broadcast or the station is not broadcasting at the current time.

Troubleshooting

What do I do if I hear a hissing / crackling noise or background music?

You need to find a new free FM frequency. Press [quickSCAN] twice to scan to the next free FM frequency (page 8) or select a new FM transmit preset (page 10).

Why can't I hear the DAB station?

Check the following:

- Make sure you have tuned your car radio to the FM frequency that Highway is transmitting on. Press [quickSCAN] to find out which frequency this is.
- If you have connected Highway to your car radio's line in or aux in socket, make sure that the correct input source on your car radio is selected (refer to the manufacturer's instructions).
- Make sure that nothing is connected to the 'LINE IN' socket on the side of the Highway unit, as this will activate Auxiliary mode.
- The audio will fade down to silent if the DAB signal is very weak and begins to 'burble'.

Why can't I tune my car radio to the FM transmission frequency?

If your car radio tuning is scanning through the FM spectrum it may not detect the transmission frequency ('PURE DAB'). Try using manual tune on your car radio to step up or down to the frequency you need (refer to the manufacturer's instructions).

Go to www.pure.com/support for a list of frequently asked questions relating to this product.

Technical Specifications

Specifications:	In-car DAB radio adapter with full DAB Band III reception. Compliant with ETS 300 401 and capable of decoding all DAB transmission modes 1-4 up to and including 256 kbps. DAB+ supported as standard in certain countries and available as an upgrade in others. See www.pure.com/support for more details.
Frequency range:	DAB Band III 174 - 240 MHz.
FM transmit range:	87.6 - 107.9 MHz.
Input connectors:	5V mini USB DC power connector (also for software upgrades), 3.5mm line in, 2.5mm aerial connector.
Output connectors:	3.5mm stereo output for headphones or connecting to car stereo aux-in (if available).
Presets:	20 DAB station presets and 4 FM transmit presets.
LCD display:	Green backlit LCD display with 16 x 2 characters and function icons.
In-car power supply:	12-24V DC to 5V DC (0.5A) mini USB power adapter. Input fuse rating T1AL (user-replaceable).
Power consumption:	5V, 400mA
Battery Power:	2 x AA batteries (not supplied) provide up to 6 hours of portable DAB listening (batteries do not work in-car). Battery life figures are based on decoding MP2, 128K DAB transmissions.
Approvals:	CE marked. Compliant with the R&TTE Directive 1999/5/EC. FM transmitter compliant with EN 301357.
Dimensions:	122mm wide x 70mm tall x 29mm deep. Weight: 156g.
Aerial:	High-sensitivity adhesive windscreen mount aerial. Headphones (not supplied) act as aerial in Handheld mode.

Resetting Highway

Resetting your radio removes all presets and stored stations and resets all options to their defaults. To reset:

1. Press and hold the [Menu] button for three seconds.
2. Press the [Tune] button within 3 seconds to confirm the reset or the reset will cancel.

Hereby, PURE Digital declares that this Band II LPD device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Copyright

Copyright 2008 by Imagination Technologies Limited. All rights reserved. No part of this publication may be copied or distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form or by any means, electronic, mechanical, magnetic, manual or otherwise, or disclosed to third parties without the express written permission of Imagination Technologies Limited.

Copyright

Copyright 2008 Imagination Technologies Limited. Tous droits réservés. Aucune partie de la présente publication ne doit être copiée ou diffusée, transmise, retranscrite, stockée dans un système de récupération de données ou traduite, que ce soit dans une langue humaine ou dans un langage informatique, sous quelque forme et par quelque moyen que ce soit, électronique, mécanique, magnétique, manuel ou autre, ou encore diffusée auprès de tiers sans autorisation écrite expresse de Imagination Technologies Limited.

Copyright

Copyright 2008 tilhører Imagination Technologies Limited. Alle rettigheder forbeholdes. Ingen dele af denne publikation må kopieres eller distribueres, transmitteres, omskrives, gemmes i et system, hvor den kan hentes, eller oversættes til menneskeligt forståeligt sprog eller computersprog, i nogen som helst form eller med nogen som helst midler, det være sig elektroniske, mekaniske, magnetiske, manuelle eller på anden måde, eller fremvises til tredje parter uden udtrykkelig, skriftlig tilladelse fra Imagination Technologies Limited.

Copyright

Copyright 2008 by Imagination Technologies Limited. Alle Rechte vorbehalten. Kein Teil dieser Publikation darf ohne ausdrückliche und schriftliche Zustimmung von Imagination Technologies Limited in irgendeiner Form (elektronisch, mechanisch, magnetisch, manuell oder auf andere Weise) kopiert, verteilt, übermittelt, überschrieben, in einem Suchsystem gespeichert, in eine andere natürliche oder Computersprache übersetzt oder Dritten zugänglich gemacht werden.

Copyright

Copyright 2008 by Imagination Technologies Limited. Tutti i diritti riservati. Nessuna parte della presente pubblicaziHighway può essere copiata o distribuita, trasmessa, trascritta, memorizzata in un sistema di archiviaziHighway, o tradotta in un formato normalmente comprensibile, in qualsiasi forma o con qualsiasi mezzo, elettronico, meccanico, magnetico, manuale o altro, o divulgata a terze parti senza il permesso scritto di Imagination Technologies Limited.

Copyright

Copyright 2008 door Imagination Technologies Limited. Alle rechten gereserveerd. Geen enkel gedeelte van deze publicatie mag gekopieerd of gedistribueerd, uitgezonden, overgeschreven, opgeslagen in een retrieval system of vertaald in om het even welke menselijke of computertaal, in geen enkele vorm of door geen enkel middel, elektronisch, mechanisch, magnetisch, manueel of anders of bekend gemaakt aan derde partijen zonder de uitdrukkelijke geschreven toestemming van Imagination Technologies Limited.

Trademarks

Highway, the Highway logo, PURE, the PURE logo, PURE Digital, the PURE Digital logo, quickSCAN, ReVu, Imagination Technologies, and the Imagination Technologies logo are trademarks or registered trademarks of Imagination Technologies Limited. All other product names are trademarks of their respective companies. Version 5 June 2008.

Marques commerciales

Highway, le logo Highway, PURE, le logo PURE, PURE Digital, le logo PURE Digital, quickSCAN, ReVu, Imagination Technologies et le logo Imagination Technologies sont des marques commerciales ou des marques déposées de Imagination Technologies Limited. Tous les autres noms de produits sont des marques commerciales de leurs détenteurs respectifs. Version 5 er juin 2008.

Varemærker

Highway, Highway-logoet, PURE, PURE-logoet, PURE Digital, PURE Digital-logoet, quickSCAN, ReVu, Imagination Technologies og Imagination Technologies-logoet er varemærker eller registrerede varemærker, der tilhører Imagination Technologies Limited. Alle andre produktnavne er varemærker, der tilhører deres respektive virksomheder. Version 5. Juni 2008.

Warenzeichen

Highway, das Highway Logo, PURE, das PURE Logo, PURE Digital, das PURE Digital Logo, quickSCAN, ReVu, Imagination Technologies und das Imagination Technologies Logo sind Warenzeichen oder eingetragene Warenzeichen von Imagination Technologies Limited. Alle anderen Produktnamen sind Warenzeichen ihrer jeweiligen Besitzer. Version 5. Juni 2008

Marchi

Highway, il logo Highway, PURE, il logo PURE, PURE Digital, il logo PURE Digital, quickSCAN, ReVu, Imagination Technologies e il logo Imagination Technologies sono marchi o marchi registrati di Imagination Technologies Limited. Tutti gli altri nomi di prodotti sono marchi di proprietà delle rispettive società. Version 5. giugno 2008.

Handelsmerken

Highway, het Highway logo, PURE, het PURE logo, PURE Digital, het PURE Digital logo, quickSCAN, ReVu, Imagination Technologies en het Imagination Technologies logo zijn handelsmerken of geregistreerde handelsmerken van Imagination Technologies Limited. Alle andere productnamen zijn handelsmerken van hun respectieve firma's. Versie 5. juni 2008.

Warranty information

Imagination Technologies Ltd. warrants to the end user that this product will be free from defects in materials and workmanship in the course of normal use for a period of two years from the date of purchase. This guarantee covers breakdowns due to manufacturing or design faults; it does not apply in cases such as accidental damage, however caused, wear and tear, negligence, adjustment, modification or repair not authorised by us. Please visit www.pure.com/register to register your product with us. Should you have a problem with your unit please contact your supplier or contact PURE Support at the address shown on the rear of this manual. If you need to return your product please use the original packaging and include all parts and accessories. We reserve the right to refuse incomplete or badly packaged returns.

Garantie

Imagination Technologies Ltd. garantit à l'utilisateur que le présent produit est exempt de défauts en termes de matériaux et de main-d'œuvre, dans le cadre d'une utilisation normale, pour une période de deux ans à compter de la date d'achat. La présente garantie couvre les pannes dues à un défaut de conception ou de fabrication ; elle ne prend pas en compte les dommages accidentels, quelle que soit leur cause, l'usure normale du produit, ainsi que tous dommages dus à la négligence, à la modification, au réglage ou à la réparation effectué(e) sur l'appareil sans notre autorisation. Visiter le site www.pure.com/register pour enregistrer votre produit auprès de nos services. En cas de problème avec votre appareil, veuillez contacter votre fournisseur ou le centre d'assistance PURE, à l'adresse indiquée au dos du présent manuel. Si vous souhaitez retourner votre article, veuillez le renvoyer dans son emballage d'origine et ne pas oublier de retourner également tous les éléments/accessoires du produit. Nous nous réservons le droit de refuser tout article retourné qui serait incomplet ou mal emballé.

Garantioplysninger

Imagination Technologies Ltd. garanterer over for slutbrugeren, at dette produkt ikke er fejlbehæftet, hvad angår materialer og håndværksmæssig udførelse ved normal brug i to år fra købsdatoen. Denne garanti dækker sammenbrud, der skyldes fremstillings- eller designfejl. Den dækker ikke i tilfælde, hvor enheden beskadiges som følge af hændeligt uheld, uanset hvordan dette sker, samt slitage, uagtsomhed, justering, ændring eller reparation, som ikke er godkendt af os. Besøge www.pure.com/register for at registrere produktet hos os. Hvis der skulle opstå problemer med enheden, bedes du kontakte leverandøren eller PURE Support på adressen, der er angivet på bagsiden af denne vejledning. Hvis det bliver nødvendigt at returnere dit produkt, skal du bruge den originale emballage og vedlægge alle komponenter og tilbehørsdele. Vi forbeholder os ret til at afvise ufuldstændige eller dårligt emballerede produkter.

Garantie-Informationen

Imagination Technologies Ltd. garantiert dem Endbenutzer, dass dieses Produkt für die Dauer von zwei Jahren ab Kaufdatum bei normalem Gebrauch frei von Schäden an Material oder Verarbeitung ist. Diese Garantie umfasst Ausfälle aufgrund von Herstellungs- und Konstruktionsfehlern; sie gilt nicht für Unfallschäden, wie auch immer verursacht, Verschleiß, Fahrlässigkeit und Veränderung oder Reparatur durch von uns nicht autorisierte Personen. Registrieren Sie Ihr Produkt bei uns unter www.pure.com/register. Sollten Sie mit Ihrem Gerät ein Problem haben, wenden Sie sich an Ihren Verkäufer oder den PURE Support. Die Adresse finden Sie auf der Rückseite dieser Bedienungsanleitung. Verwenden Sie bei Rücksendungen bitte die Originalverpackung und fügen Sie alle Teile und das vollständige Zubehör bei. Wir behalten uns das Recht vor, unvollständige oder unzureichend verpackte Rücksendungen abzulehnen.

Informazioni sulla garanzia

Imagination Technologies Ltd. garantisce all'utente finale che il presente prodotto è esente da difetti di materiale e fabbricazione in condizioni normali di utilizzo per un periodo di due anni a partire dalla data di acquisto. La presente garanzia copre i danni dovuti a difetti di fabbricazione o progettazione; non si applica in casi quali danni accidentali, in qualsiasi modo siano stati provocati, usura, negligenza, regolazione, modifica o riparazione non autorizzate. Visitare il sito www.pure.com/register per registrare il prodotto. In caso di problemi relativi all'unità, contattare il proprio fornitore oppure contattare il Supporto tecnico PURE all'indirizzo indicato sul retro del presente manuale. Nel caso in cui il prodotto debba essere restituito, è necessario utilizzare l'imballaggio originale, includendo tutte le parti e gli accessori. Ci riserviamo il diritto di respingere prodotti restituiti con l'imballaggio incompleto o danneggiato.

Informatie over de waarborg

Imagination Technologies Ltd. waarborgt de eindgebruiker dat dit product vrij is van defecten in materialen en werkuren bij normaal gebruik voor een duur van twee jaar vanaf de datum van aankoop. Deze garantie dekt defecten door productie- of ontwerpfouten; het is niet van toepassing in gevallen als accidentele schade, hoe ook veroorzaakt, slijtage, onachtzaamheid, instelling, wijziging of reparatie die door ons niet werd goedgekeurd. Bezoek www.pure.com om uw product bij ons te registreren. Indien u een probleem hebt met uw apparaat, gelieve uw leverancier te contacteren of contacteer PURE Support op het adres op de achterzijde van deze handleiding. Als u uw product moet retourneren, gebruikt u de oorspronkelijke verpakking en voegt u alle onderdelen en accessoires bij. Wij behouden het recht om onvolledige of slecht verpakte retourzendingen te weigeren.

Disclaimer

Imagination Technologies Limited makes no representation or warranties with respect to the content of this document and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Imagination Technologies Limited reserves the right to revise this publication and to make changes in it from time to time without obligation of Imagination Technologies Limited to notify any person or organization of such revisions or changes.

Avis de non-responsabilité

Imagination Technologies Limited refuse toute représentation ou garantie vis-à-vis du contenu du présent document et refuse spécifiquement toute garantie implicite de valeur marchande ou d'adéquation à un usage spécifique. En outre, Imagination Technologies Limited se réserve le droit de réviser la présente publication et d'y apporter des modifications, quand elle le souhaite, sans obligation de sa part de notifier toute personne ou organisation desdites révisions ou modifications.

Ansvarsfraskrivelse

Imagination Technologies Limited afgiver ingen garantier eller erklæringer med hensyn til indholdet af dette dokument og fralægger sig i særdeleshed eventuelle stiltiende garantier for salgbarhed eller egnethed til et bestemt formål. Endvidere forbeholder Imagination Technologies Limited sig ret til at revidere denne publikation og foretage ændringer fra tid til anden, uden at Imagination Technologies Limited er forpligtet til at underrette nogen person eller organisation om sådanne revideringer eller ændringer.

Ausschlusshinweis

Imagination Technologies Limited gewährt keine Garantien für den Inhalt dieses Dokuments und lehnt insbesondere implizierte Garantien für die allgemeine Gebrauchstauglichkeit bzw. die Eignung für spezielle Zwecke ab. Weiterhin behält sich Imagination Technologies Limited das Recht vor, diese Publikation von Zeit zu Zeit zu überarbeiten und zu ändern, ohne dass daraus eine Verpflichtung für Imagination Technologies Limited entsteht, irgendeine Person oder Organisation von solchen Änderungen in Kenntnis zu setzen.

Dichiarazione di non responsabilità

Imagination Technologies Limited non si assume alcuna responsabilità rispetto al contenuto del presente documento, in particolare non riconosce nessuna garanzia implicita di commerciabilità o idoneità per uno scopo specifico. Inoltre, Imagination Technologies Limited si riserva il diritto di revisionare la presente pubblicazione e di apportarvi modifiche periodiche senza alcun obbligo di notifica a qualsiasi persona o organizzazione.

Vrijwaring

Imagination Technologies Limited geeft geen verklaring of garanties met betrekking tot de inhoud van dit document en wijst specifiek elke verantwoordelijkheid af met betrekking tot om het even welke onuitgesproken garanties naar verhandelbaarheid of geschiktheid voor enig bijzonder doel. Daarenboven behoudt Imagination Technologies Limited zich het recht voor om deze publicatie te reviseren en af en toe veranderingen aan te brengen zonder de verplichting voor Imagination Technologies Limited om personen of organisaties van deze revisies of veranderingen op de hoogte te brengen.

Disposal of Waste Electrical & Electronic Equipment

This symbol on the product or on its packaging indicates that this product should not be treated as household waste. Instead it should be handed over to a suitable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local council office, your household waste disposal service or the shop where you purchased the product.

Entsorgung von gebrauchten elektrischen und elektronischen Geräten

Das Symbol auf dem Produkt oder seiner Verpackung weist darauf hin, dass dieses Produkt nicht als normaler Haushaltsabfall zu behandeln ist, sondern an einer Annahmestelle für das Recycling von elektrischen und elektronischen Geräten abgegeben werden muss. Durch Ihren Beitrag zum korrekten Entsorgen dieses Produkts schützen Sie die Umwelt und die Gesundheit Ihrer Mitmenschen. Umwelt und Gesundheit werden durch falsches Entsorgen gefährdet. Materialrecycling hilft den Verbrauch von Rohstoffen zu verringern. Weitere Informationen über das Recycling dieses Produkts erhalten Sie von Ihrer Gemeinde, den kommunalen Entsorgungsbetrieben oder dem Geschäft, in dem Sie das Produkt gekauft haben.

Trattamento del dispositivo elettrico od elettronico a fine vita

Questo simbolo sul prodotto o sulla confezione indica che ilprodotto non deve essere considerato come un normale rifiuto domestico, ma deve invece essere consegnato ad un punto di raccolta appropriato per il riciclo di apparecchi elettrici ed elettronici. Assicurandovi che questo prodotto sia smaltito correttamente, voi contribuirete a prevenire potenziali conseguenze negative per l'ambiente e per la salute che potrebbero altrimenti essere causate dal suo smaltimento inadeguato. Il riciclaggio dei materiali aiuta a conservare le risorse naturali. Per informazioni più dettagliate circa il riciclaggio di questo prodotto, potete contattare l'ufficio comunale, il servizio locale di smaltimento rifiuti oppure il negozio dove l'avete acquistato.

Traitement des appareils électriques et électroniques en fin de vie

Ce symbole, apposé sur le produit ou sur son emballage, indique que ce produit ne doit pas être traité avec les déchets ménagers. Il doit être remis à un point de collecte approprié pour le recyclage des équipements électriques et électroniques. En s'assurant que ce produit est bien mis au rebus de manière appropriée, vous aiderez à prévenir les conséquences négatives potentielles pour l'environnement et la santé humaine. Le recyclage des matériaux aidera à conserver les ressources naturelles. Pour toute information supplémentaire au sujet du recyclage de ce produit, vous pouvez contacter votre municipalité, votre déchetterie ou le magasin où vous avez acheté le produit.

Bortskaffelse af elektriske og elektroniske produkter

Hvis dette symbol findes på produktet eller på emballagen betyder det, at det pågældende produkt ikke må bortskaffes som almindeligt husholdningsaffald. Du skal i stedet aflevere det på et indsamlingssted, så det elektriske og elektroniske udstyr kan blive genbrugt. Når du bortskaffer produktet korrekt, hjælper du med at forhindre de mulige negative påvirkninger af miljøet eller sundheden, der kan opstå, hvis produktet bortskaffes på upassende vis. Genbrug af materialer er med at bevare naturens ressourcer. Yderligere oplysninger om genbrug af produktet fås på kommunen, på genbrugscentralen eller i den butik, hvor du købte produktet.

Afdanken van oude elektrische en elektronische toestellen

Het symbool op het product of op de verpakking geeft aan dat dit product niet wordt behandeld als huishoudelijk afval. Het moet worden binnengebracht bij een inzamelpunt voor de recylage van elektrische en elektronische toestellen. Door dit product op de juiste wijze af te danken, kunt u potentieel negatieve gevolgen voor het milieu en de mens voorkomen, die het gevolg kunnen zijn van het verkeerd verwerken van dit product. De recyclage van materialen helpt de natuurlijke grondstoffen te sparen. Voor informatie over de recyclage van dit product kunt u contact opnemen met uw gemeentebestuur, uw afvalverwerkingsdienst of de winkel waar u het toestel heeft gekocht.

PURE Digital
Imagination Technologies Ltd.
Home Park Estate
Kings Langley
Herts, WD4 8LZ
United Kingdom

+44 (0)845 148 9001 sales and support
+44 (0)845 148 9002 trade sales and support
+44 (0)845 148 9003 fax
support@pure.com
sales@pure.com

PURE Digital
Karl-Marx Strasse 6
64589 Stockstadt/Rhein
Germany

+49 (0)6158 878872 sales
+49 (0)6158 878874 fax
sales_gmbh@pure.com

PURE Digital - Vertrieb über:
TELANOR AG
Unterhaltungselektronik
Bachstrasse 42
4654 Lostorf
Schweiz/Switzerland

+41 (0)62 285 95 95 sales
+41 (0)62 285 95 85 fax
info@telanor.ch
www.telanor.ch

PURE Australasia Pty Ltd
PO Box 5049
Wonga Park.
Victoria 3115
Australia

+61 (0)3 9722 2422 sales and support
+61 (0)3 9722 2104 fax
support_aus@pure.com
sales_aus@pure.com

www.pure.com

Need help?

We want you to get the most out of your new product and enjoy all that digital radio has to offer. If after reading this manual you have any questions about the product, please contact a member of our user support team by phone or e-mail.

Returns & Repairs

If this product develops a fault within the Warranty period we'll organise a repair or replace it if necessary. Read the 'Warranty information' in the back pages of this manual for information about the Warranty period, terms and conditions.

+44 (0)845 148 9001
Open 9am–5:30pm, Mon–Fri.
UK calls charged at local rate.

support@pure.com
www.pure.com/support

highway

Printed on 100% recycled paper

100ZG